



**File Name:** bulldog remote starter user manual.pdf

**Size:** 2751 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 9 May 2019, 18:58 PM

**Rating:** 4.6/5 from 589 votes.

**Status:** AVAILABLE

Last checked: 15 Minutes ago!

**In order to read or download bulldog remote starter user manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bulldog remote starter user manual . To get started finding bulldog remote starter user manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.




## Book Descriptions:

# bulldog remote starter user manual



System Components. Required Tools. Technical Assistance. Before You Begin. Precautions. Using your Test Probe. Enjoy your new remote starter for years to come. This remote system is designed to start your vehicle by sending a command signal from the remote transmitter. For RS85 only, continue. PRECAUTIONS This system is designed for use with vehicles equipped with fuelinjected, gasoline engines with automatic transmissions only. If two or more wires are inserted, wrap them in opposite directions. 5. Wrap the wire around one side then the other and finally around itself as shown. 6. Secure with wire ties as shown. Use this method ONLY when connecting two separate wires end to end. TwoButton Extended Range Remotely start your car to run the heater or air conditioning from an extended distance. Page 3 Since there are many different makes and models of vehicles, look at the wiring chart on or our website. The parking lights will flash once the unit is now programmed Release the brake and the parking lights will flash three 3 times. To turn Dual Pulse The parking lights will flash once the unit is now programmed Release the brake and the parking lights will flash three 3 times. To turn Dual Pulse Maximum length, 15 minutes. Release the brake, now try the remote. The unit should not function with the remote. If the The parking lights will flash once, confirming the car starter received the The parking lights will flash and remain on for one The dome light will remain on for one minute or until you turn the ignition on or The parking lights will remain on for as long as this button is This output can be used to Example Three parking light flashes represents 15 minutes. Shock Sensor ByPass. Noiseless Mode. Passive Starter Disable. Hidden Alarm Function. Passive Arming with Passive Door Locking. Passive Arming ByPass. Tamper Disarming. Pathway Illumination. Two Steps Door Unlock. Automatic ReArm. Overrides the Alarm without Password Pin Code. <http://ivplanet.ru/userfiles/definitive-technology-bp2006tl-manual.xml>

- **bulldog remote starter user manual, bulldog remote starter user manual online, bulldog remote starter user manual download, bulldog remote starter user manual pdf, bulldog remote starter user manual instructions.**

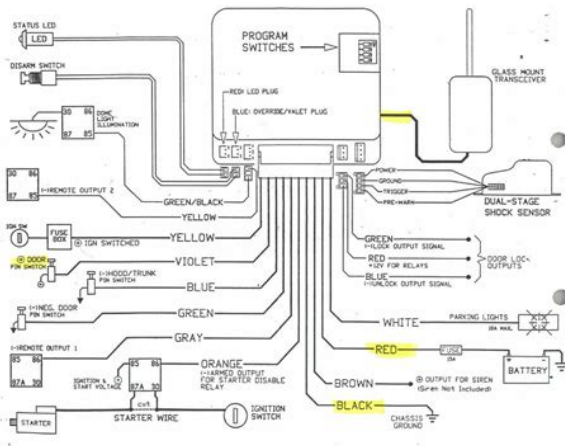

Overrides the Alarm With Password Pin Code. Enter Valet Mode. Exit Valet Mode. Remote Valet. Clear The Trigger Icons and Melody Sound. Stop The Melody Sound Only. Noise Abatement Circuit. Active Anti Car Jacking. Passive Anti Car Jacking. Trigger The Anti Car Jacking Mode Daily Timer Start. Exit the Timer Start Arm and Delete The 2 Stage Shock Sensor. Press twice within 3 seconds. Arm and Noiseless Mode. Press within 3 seconds. Arm System and Hidden Alarm Function. Remark Car Locator. Panic function. Upon armed. Press and Hold for 3 seconds. Active Anti Car Jacking Mode Trunk Release Channel 3. Passive Arming Bypass Activate or Turn Off The Remote Start. Press and Hold for 2 seconds. While the system Disarmed. While the system Disarmed, Press Press twice within 3 seconds. System's Trigger Check. Remark. System's Status Check. Monitor Indoor Temperature. Daily Timer Start. LCD screen lamp turns on for 5 seconds. Clear the Flash Icon and Melody Sound on Press within 3 seconds. Press and hold for 1 second. C. LED display Slow Flash. Flash. Fast Flash. On Solid. Pause On. Function. Disarmed. Armed. Passive Arming. Valet Mode. Password Lock Out Function Arm. Disarm. Ajar Warning. Car Locator. Parking light Constant On. Arm. Under Remote Start Starter Disable Alarming. Parking Light LED. Doors. Starter Dome Light Slow Flash Locking. Disable Unlocking. Turns on for 30 second. Flashes. Slow Flash. Disable Flashes. Disable. Alarming. Alarming Flashes. Flashes Flashes. Locking System Arm. Door Ajar. Clear The Flash Icon. Press the F button 3 AJAR WARNING If the siren sounds 3 chirps, then you have left a door, trunk, or hood lid ajar. SHOCK SENSOR BYPASS Press the The system will chirp one additional time to confirm the The sensor bypass feature is programmed to activate for one arming NOISELESS MODE Press button Press the Noiseless mode, On this mode trigger the zone 4 shock sensor, the trigger timer will be reduced from 30 The noiseless feature is programmed to activate for one arming cycle only. <http://www.adbagroup.com/E/definitive-technology-bp7002-manual.xml>

#### IMPORTANT NOTICE

**WARNINGS:**  
As with any product that performs automatic functions, there are certain safety precautions that you must read and be aware of:

1. Keep all transmitters out of the reach of children.
2. Do not leave anyone in the vehicle while running in remote control mode.
3. Only servicing personnel that the vehicle can be remote started.
4. Do not start the vehicle by remote while the vehicle is in an enclosed lot or garage.
5. Always apply the parking brake and lock the vehicle before exiting.
6. The use and operations of this system is the sole responsibility of the operator.
7. Some areas may have local ordinances that prohibit leaving a vehicle running on public streets.

#### LCD REMOTE CONTROL TRANSCIVER

**3. Count Down Timer Settings: Example Set count down timer at 2:30**

1. Press and hold the **F** button for 3 seconds, with two-melody sound and the "Hour" digit flashes for adjusting.
2. Press the **F** button 5 times, the LCD screen will show 0 icon and "Hours" digit is flashes for adjusting.
3. Press the **#** or **9** button to decrease or increase the "Hour" digit until 2:00.
4. Press the **F** button once again then the "Minutes" digit flashes for adjusting.
5. Press the **#** or **9** button to decrease or increase the "Minutes" digit until 2:30.
6. Press the **F** button once again then 0 icon flashes for alert alarm "OK / OFF" setting.
7. Press the **9** button to start the count down timer, and the "OK" icon will show on the LCD screen. Press the **#** button to stop the count down timer, and the "OFF" icon will show on the LCD screen.
8. Press the **F** button for 2 seconds with one-melody sound to confirm exit the timer program mode.

Note: Maximum is 15 hours.


**4. Time Set-Up For "Daily Timer Start": Example to AM 6:30**

1. Press and hold the **F** button for 3 seconds, with two-melody sound and the "Hour" digit flashes for adjusting.
2. Press and hold the **#** button for 2 seconds, the LCD screen will flash 0 icon and "hour" digit for hour setup.
3. Press the **#** or **9** button to decrease or increase the hour digit until AM 6:00.
4. Press the **F** button once again then the minute digit flashes.
5. Press the **#** or **9** button to decrease or increase the minutes digit until AM 6:30.
6. Press the **F** button for 2 seconds with one-melody sound to confirm exit the timer program mode.

The security system will return PASSIVE STARTER DISABLES This security system is equipped with an optional Passive Starter The starter of the vehicle will be disabled 60 seconds after the ignition is turned off. Once the key is turned After 60 second timer has elapsed, the LED will flash slowly one half

its normal armed state to indicate the HIDDEN ALARM FUNCTION. Press the The security system will arm and with "Hidden Alarm Function". The Operation is as follows. If you reopen any. It will begin flashing again once the PASSIVE ARMING BYPASS. While the system is disarmed, Press the. The security system will remain in this temporarily state for System Disarm. Doors Trigger. Shock Sensor Trigger. Ignition Trigger. CLEAR THE FLASH ICON Press the F button 3 times within 3 seconds will clear the flash icon on TAMPER DISARMING. If alarm triggered, upon disarm the system, siren chirp 4 times, parking light flash PATHWAY ILLUMINATION. This feature turns the parking light "ON" for 30 seconds upon a unlock signal TWO STEPS DOOR UNLOCK. This feature will independently unlock the driver's door only when Pushing the AUTOMATIC REARM. If this feature is selected, the security system will automatically rearm itself in 60 Automatic rearm will cancel if any door is opened before The Override function may be used if the remote transmitter is lost or inoperative. The alarm will stop sounding and enter the disarm mode. You can now start and operate the vehicle Note You must override the alarm within 60 seconds. If not, the system will automatically rearm. EXAMPLE To Override The System With The Password Code 83, you would; K. VALET MODE System in Disarm or Valet mode When the system is in valet mode, all alarm To use the valet mode, the system must first be disarmed either by using Enter Valet Mode LED turns on. The LED will remain on as long as the Exit Valet Mode REMOTE VALET System in Disarm or Valet mode. Press and release.

A parking flash to confirm enters valet mode and two parking lights flashing to confirm exit valet mode. The siren will M. PANIC FUNCTION See Alarm Feature I 7 Programming. The transmitter can be used as a remote panic switch to manually trigger the alarm in case emergency. The The starter disable relay if installed prevents the vehicle's starter from cranking. The siren, horn, parking Then it will stop and automatic Shock Sensor. Ignition. Warnaway. Trigger. Trigger CLEAR THE FLASH ICON AND MELODY SOUND While triggering the alarm the LCD screen will alert NOISE ABATEMENT CIRCUIT You system has "Noise Abatement Circuit". It prevents annoying Here's how "Noise Abatement Circuit" works The alarm triggers five times. Each time, the same sensor or After the fifth trigger, "Noise Abatement Circuit" ignores, or bypasses, that sensor or switch until the other The siren will start chirping for 15 seconds. If not, it will enter second timer car jacking. The siren starts alarming and the parking light starts Note If you use password pin code to double protect the vehicle security, you will need to use it to P. SYSTEM'S TRIGGER CHECK For twoway transceiver operation only. Press the transceiver F button first, within 3 seconds press Note If it has no responds then you are out of range. Q. SYSTEM'S STATUS CHECK For twoway transceiver operation only. When you want to check the system's present status through the LCD screen, Press the Note If it has no responds then you are out of range. R. DRIVER PAGING For twoway transceiver operation only. It is useful the event that someone wants to page the driver of the parked vehicle. Under the ignition switch "off" condition, press and hold the valet switch for 2 seconds to The alarm with a unique feature which will turn on your vehicle dome light as following Note Turn on the ignition switch or arm the alarm will turn off the dome light.

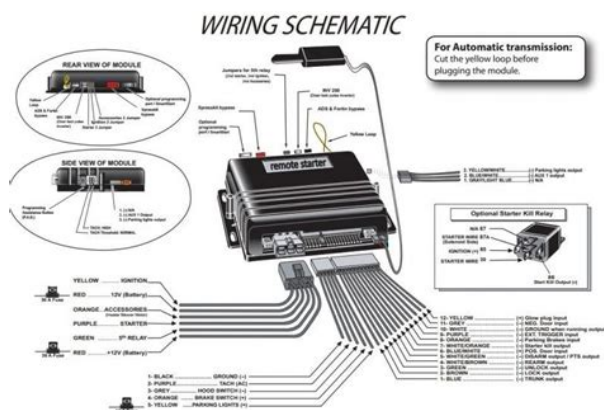


<https://ayurvedia.ch/3-m-manual>

If the vehicles door locks have been interfaced to the security system, the system will automatically lock. Press the transmitter. You may program the builtin. Press the transmitter. You may program the builtin. Remote Start LCD screen to confirm the remote start was activated. Note The Remote Start Unit will not start the vehicle if any one of the following: Engine. Running. SAFE START Child safety mode Programming. Factory defaults setting to press the. The user presses the transmitter. The system senses the neutral transmission gear position automatically and there is no prior setup. If the vehicles are of automatic. If the door is opened after above process, the prior memorization for the next remote or programmed. Note If the engine start memorize is set up, the dome light convenience delay function will be temporarily. Bypass. Note If the brake pedal is pressed before the key is in the ON position, the engine will shut down. Note For Standard Transmission Gear Vehicle Before press the. This unit can be programmed to start and run the engine every 3 2 hours or punctually at the same time. IMPORTANT Timer Start should be used only in open areas, Never start and run the vehicle in on. If you programmed the temperature ON to operate. The system can be programmed to automatically start. The system will monitor the air temperature every 3 2 hour and will. There is three temperature level to choose form. Daily Timer Start The feature is very useful for the driver who wants to run the vehicle punctually at the. Before setup of the "Daily Timer Start", you should set you time for engine. As soon as the vehicle is running and the parking. The vehicle is now programmed to start every 3 2 hours. The siren chirps 6 times. The. Your set time for the next day engine start flashes for approx. 3 seconds on the LCD. Exit the timer start. Timer start can be exited manually as follows. The LED and parking light will flash 4 times. The horn chirps 4 times.

<http://artisanatlucratif.com/images/boss-ge-215-manual.pdf>

### Connecting the FBP-718 to the RS-1100 SERIES units with On-Board Relays.

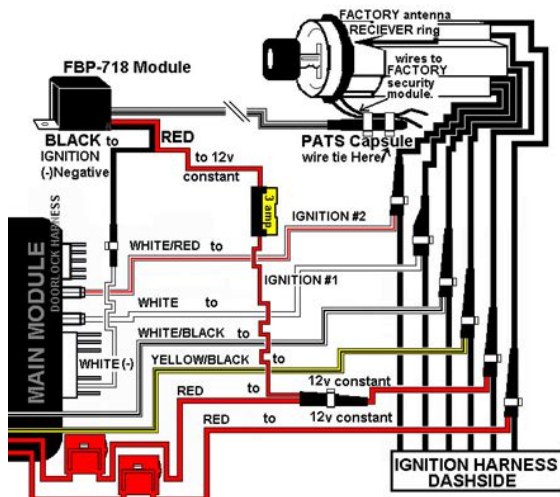

Or. As soon as the vehicle is running and the parking. The parking. The siren or horn chirps 4 times. The vehicle is no longer programmed to start. Press the transceiver F button first, within 3 seconds press the. This reading may be higher than. The vehicle will shut down and turn off the parking light to indicate engine stopped. J. DISABLING THE REMOTE START SYSTEM If installed. This feature allows your system's remote start unit to be temporarily disabled to prevent the vehicle from. This

feature is useful if the vehicle is being serviced or stored in an OFF position. When the power of the battery When the old battery is replaced to new one, Correct the time by pressing Note Press the Your vehicle doors are unlocked and Valet Mode. All the function shall be temporarily Your are within the remote control Trunk or Hood is illegally opened Warn Away trigger. Trigger on Shock Sensor Zone 1. Door Lock. Your vehicle doors are locked. Armed Mode. Your vehicle is in armed mode. Remote Transmission. You are transmitting the signal to Door Open Warning. Doors are illegally opened Zone 3. Trigger on Shock Sensor Zone 4. Engine Starting. Your vehicle engine starting by Timer Control Start. Engine start automatically at the Activate Channel 3 Trunk. Release. Activate Channel 5 Your vehicles engine is running. Temperature Monitor. Indoor temperature of your vehicle Alert Alarm. You have set morning call alarm. Power Save Mode. Save the battery power. Time Monitor. Count Down Timer. Reminder when time is up for Vibration Mode. Remote Control vibrates when the Driver paging. Someone is paging you in front of Button Lock. Disable the transmission function Low Battery. You have to replace the battery off 1 second. Description. F 3 seconds. Timer Programming Mode. F 5 seconds. Power Save Mode Clear the Flash Icon and Melody Sound on Program Count Down Timer 10 Minute. Operation. Press and hold for 1 second Press and hold for 3 seconds Press and hold for 5 seconds Press within 3 seconds.

<http://givinggroup.com/images/boss-giga-delay-manual-german.pdf>



Press within 3 seconds cycling Pressing Button Exit Press any button of the LCD remote transmitter to exit the "Power Save Mode". It is useful when you are in a noisy place and difficult to hear beep sound from the Press the F button first, within 3 seconds press and hold the LCD screen to show the LCD remote transceiver is on vibration mode. It has a short "bi" sound while pressing the button of the LCD screen transceiver. If you want mute the "bi" sound mute always while press button. Press the F button first, within 3 seconds When the power of the battery weakens, it has two short "bi" sound and flash Note 1. The count down period is fixed as 10 minutes, 20 minutes, 30 minutes, 1 hour, 1.5 hours and 2 The system will automatically check the range every 20 minutes after armed. Press Transceiver Button. Timer Setting Hour. Time setting Minute Alert Alarm Time Setting

Hour. Alert Alarm Time Setting Minute. Press the F button once Press the F button once Count Down  
Timer Setting Hour Count Press the F button once Press the F button once. Daily. Timer. Start.  
Setting Flash EXIT Press and hold the Transceiver Button Press the F button once Press the Press  
the Note Maximum is 19 hours. Hour setup. This device complies with part 15 of the FCC rules.  
Operation is subject to the following two conditions 1 This device may not cause harmful  
interference. Note The manufacturer is not responsible for any radio of TV interference caused by  
unauthorized modification to this PDF Version 1.3. Linearized No. Page Count 15. Creation Date  
20040625 030401Z. Mod Date 20040625 030401Z. Producer Acrobat Distiller 5.0 Windows.  
Metadata Date 20040625 030401Z. High Quality Siren Speaker Extremely loud siren and voice  
deters thief from further tampering. Battery BackUp Optional Alarm will continue to sound even  
with vehicle battery disconnected. Current Sensing Activates after 45 seconds. Alarm will sound  
with changes in current.

EXAMPLE Dome light or ignition switch State of the Art Electronic Not sensitive to temperature or  
age; extremely sensitive to shock Dual Stage Shock Sensor or glass breakage. Talking Alarm  
Demands authority and attention compared to nontalking alarms. Instant Panic Mode Should you  
feel threatened you can remotely activate, with a press of the remote transmitter, a woman's voice  
shouting "Please Help Me", and siren sounding. Remote Car Finder Helps you locate your vehicle in  
crowded parking lots. Automatic Alarm Reset If the alarm is violated, it will stop and rearm itself  
after 30 seconds. Scan Deterrent Protects your car from scanning devices sometimes used by thieves  
to disarm alarm systems. LED Indicator Our Superbright LED is a visual deterrent to help stop theft.  
Passive Arming Automatically arms the system 1 minute after the vehicle is shut off remotely  
programmable. High Theft You may program your alarm to "chirp" or say "system armed" every 20  
to 30 seconds to warn away potential thieves remotely programmable. Negative Input Trigger Grey  
When grounded with other modules or door pins this will set off alarm. Negative Input Trigger  
Green When grounded with other modules the alarm will say "You are too close to the vehicle,  
please move away." Limited Lifetime Warranty Guarantees lifelong protection. TECHNICAL  
ASSISTANCE Should you need help. This is usually triggered by shock sensors, glass breaking,  
negative door or hood pins. 3. Yellow Wire Antenna Antenna wire should never be cut or lengthened.  
Note You must press at least one button on each transmitter within 35 seconds after this connection  
or the alarm will not work. This step must be repeated after the power is disconnected for any  
reason. Note If you have disconnected battery power, or you have used your vehicle to jump start  
another vehicle, you must perform the above steps to be sure the unit is working on 12 volt power  
not the 9 volt battery. 5. Blue Wire Neg. Output Connect to optional L.K.L.

<http://www.davidwoodpersonnel.com/wp-content/plugins/formcraft/file-upload/server/content/files/1626c6de6b42a7---canon-powershot-sx40-hs-instruction-manual.pdf>

Module or other module that requires grounding input. The output goes to ground when armed,  
open when disarmed. Never connect this wire directly to the vehicle!! 6. Orange Loop Current  
Sensing Your alarm will ignore all current changes for 45 seconds after the alarm is set. Note  
Professional installers should run a ground wire from the battery to the base of the alarm. The  
Superbright LED is ON when the system is ARMED and OFF when the system is DISARMED.  
WARNING! This security system is highly complex in its installation and adjustment  
procedures. Instructions are NOT provided or enclosed. NOTE Your alarm will ignore all violations;  
current and shock, for approximately 45 seconds after you arm it. NOTE If the vehicle was tampered  
with while the alarm was set, the alarm will have sounded for 35 seconds, shut off and then rearmed  
itself. This is a good time to inspect the vehicle for forced entry marks, paint dings or scratches, and  
check to be sure a wheel isn't partially removed, etc. Adjusting the Shock Sensor NOTE The factory  
setting on the shock sensor should be acceptable for most vehicles. Tap your hood above the alarm  
at the sensitivity level you wish. The harder you hit the car the less sensitive the alarm will be. The

alarm will then say "Thank You". The shock sensor is now set at this sensitivity. Any shock that is equal to or greater will sound the alarm. Set the sensitivity as often as you wish; however, the sensitivity level will remain set until the battery is disconnected or you reset it. If you do not tap the car it will automatically go to maximum sensitivity. This setting is only acceptable if the car is parked inside a garage. The alarm will chirp 8 times. This is used to locate your vehicle in a crowded parking lot. A woman's voice shouts "Please help me" and alarm sounds for 30 seconds. To stop the alarm before the 30 seconds, press any of the 4 transmitter buttons.

This feature functions at all times; whether the alarm is armed or disarmed, or the engine is off or running. Special Situations Sometimes when you park your car in heavy rain, near a construction zone, near trucks, etc. The next time the alarm is set it will go back to the original setting. Setting the Current Sensor To disarm the system. This indicates that current sensing is now turned off. To turn Current Sensing back on Disarm the system. This indicates that current sensing is now turned on. NOTE Factory setting is ON. 4 Automatic Passive Arming To activate passive arming. Alarm will respond with a tone and then say "system armed". Your alarm will automatically arm itself in 60 seconds after each time you turn off your engine. After disarming your system, you have approximately 60 seconds to start your motor before the alarm will rearm itself. The alarm will respond with one tone and say "system disarmed" High Theft Area To make your alarm say "system armed" every 30 seconds. Either option will be for this arming only. The system will return to normal operation after it is disarmed. After 30 seconds; if the violation stops, the alarm will stop and rearm itself. If your vehicle is violated A man's voice shouts " I was tampered with", and the siren sounds. 35 seconds after the violation stops the alarm will stop and rearm itself. The alarm will respond "System Disarmed". Both transmitters will now operate the system. 5 We are a nonprofit group that run this service to share documents. We need your help to maintenance and improve this website. To calculate the overall star rating and percentage breakdown by star, we don't use a simple average. Instead, our system considers things like how recent a review is and if the reviewer bought the item on Amazon. It also analyzes reviews to verify trustworthiness. See All Buying Options Add to Wish List Disabling it will result in some disabled or missing features. You can still see all customer reviews for the product.

The only think that made me give 4 star rating is the remote. If it was made out of more heavy duty plastic it would be good. The first plastic part that broke with in few weeks was the key chain attachment. Battery door lock started to open when remote was in packet to the point now is last somewhere and stepping on it by accident easy broke LCD. In order to complete the installation I just taped the key inside. Bulldog wanted me to send the entire Deluxe500B Remote Starter to them. So I figured it best to just purchase a different JBS bypass module, guess what. My key is still secured by electrical tape in the original bypass module. I have installed 3 Bulldog remote starters before but the instructions on this one are the worst that I have seen yet, I think they were translated from french by a chinese person. The bulldog website has instructions for most vehicles but they were incorrect on 2 of my wires. The remote occasionally resets itself as if the battery is disconnecting and you hear that chime that occurs when first installing the battery. The dome light is hooked up correctly because it will flash as it should when hitting the panic button but the horn has never functioned, thats fine though because I dont need any horn confirmations. I think Bulldog has gone down in quality since the other 3 remote starters that I have installed from them, that is probably why the price of this unit has dropped so drastically. Please try again later. C. D. K. 3.0 out of 5 stars In order to complete the installation I just taped the key inside. I think Bulldog has gone down in quality since the other 3 remote starters that I have installed from them, that is probably why the price of this unit has dropped so drastically. Please try again later. Please try again later. Andrew 3.0 out of 5 stars Has issues with cranking for too short of a time on colder days. Button for starting is a little strange. EATS batteries like they are going out of style.



That all said, its super easy to install and quite feature rich for what it is Bulldog has incredible reference material available. I dont recommend you try to install yourself unless you are very confident in your skill with 12V. Wish the signal wasnt so easily interrupted by things like windows and chain link fences. I would buy again for a bargain starter, but you get what you pay for Please try again later. Please try again later. Mark M. 4.0 out of 5 stars I like all the option that can be added and programed. The only think that made me give 4 star rating is the remote. Battery door lock started to open when remote was in packet to the point now is last somewhere and stepping on it by accident easy broke LCD. Please try again later. Please try again later. Joseph Johnston 5.0 out of 5 stars If youre a novice with automotive electronics or dont have time to fully read, study and understand what is needed to completely install this product correctly, then Id suggest that you pay to have it installed. It does take some time to install, especially if this is your first remote starter or you dont have a good understanding of where given wires are located for your vehicle. The product in conjunction with the bulldog website will provide complete instructions for getting the job done right. I do highly recommend this product and Id buy it again for another vehicle. Please try again later. Please try again later. btravis 5.0 out of 5 stars I orig had a different system installed on my 2000 Impala, but the remote buttons went bad. So I purchased an Audiovox system. That was a big mistake. The remote usually dont work, unless you are 20 feet from the vehicle. So I purchased this Deluxe 500B system. I absolutely love it. The distance is absolutely great. I can start it with confirmation from the other side of my work building. Beware that remote starts are not the easiest installs. I have installed 6 remote starts.

This system is my favorite, but every install is different depending on the manufacture. Its impossible for them to make a system to cover every car. Please try again later. Please try again later. Chuck Stampfle 3.0 out of 5 stars The antenna stub broke off just taking out of the box. Installation documentation is only OK. The manual they sent was a photo copy. It was not copied with attention to detail. The first letters of each word in a sentence are cut off. The web site video is quite helpful though. They need a technical writer to write the manual. I installed the unit on a car with a manual transmission. This particular unit is designed to also work with a manual transmission. After many calls to tech support everything worked but the unit would not engage the starter without success I figured out that the unit does not accommodate for the clutch switch. Once I bypassed the clutch switch the unit works fine. Please try again later. Please try again later. Dan B 5.0 out of 5 stars This one was the best one I have installed and the most difficult one. I can open my side door on my minivan. I love the whistle it does when it starts. On the other ones I had to see the parking lights would flash. When I hit the start button it will go through the walls, cement walls and whatever. Then it starts. Love it!! Please try again later. Please try again later. Tyler M 4.0 out of 5 stars It wasnt easy to install. Have a professional do it. My complaints are that the battery cover and keychain holder broke off the remote after a couple months. I cant remember if I dropped the remote or not, but it broke somehow. It still starts the car and I love that it tells me if the car started or not so I dont go out to a cold car and find out it never started. Please try again later. Please try again later. KDO 2.0 out of 5 stars They want a left arm for a replacement. I purchased the new remote and it worked for awhile, now nothing. Tried resetting it, but still does not work.

Too much money and work for an inferior unit. Please try again later. Please try again later. tdc 2.0 out of 5 stars My mechanic who is very experienced said it sometimes takes him upwards of 10 hours to install one of these. I was naive enough to believe that a car as common as mine a 2008 Honda Accord would not need additional parts, but I was mistaken. Its just frustrating when you think youre getting a good deal to find out the bottom line is double what you were expecting. Please try again later. Please try again later. All parts excluding the control module have a two year warranty against defects in workmanship, This includes shock sensors, remote transmitters and sirens. The control module will be repaired or replaced at our discretion for up to a 12 month period at no charge. Press within 3 sec. SETSET 1 sec. SETSET SET Daily Timer Start Press within 3 sec.

Press and hold for 1 sec.

<https://skazkina.com/ru/3-m-manual>