

# Canon zr600 manual

Canon

PUB.DIM-734

Digital Video Camcorder  
Instruction Manual **English**  
Caméscope numérique  
Manuel d'instruction **Français**  
Videocámara digital  
Manual de Instrucciones **Español**

ZR700 / ZR600



Mini DV Digital Video Cassette

PictBridge

Please read also the following instruction manual (electronic version on PDF file). For further details refer to the installation guide.

Veuillez lire aussi le manuel d'instruction suivant (version électronique sur fichier PDF). Pour d'autres détails référez-vous au guide d'installation.

Lea también el siguiente manual de instrucciones (versión electrónica en archivo PDF). Para mayores detalles, refiérase a la guía de instalación.

• Digital Video Software



NTSC

**File Name:** Canon zr600 manual.pdf

**Size:** 4926 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 5 May 2019, 20:41 PM

**Rating:** 4.6/5 from 585 votes.

## Download Now!

Please check the box below to proceed.



I'm not a robot



reCAPTCHA  
Privacy - Terms

## Book Descriptions:

# Canon zr600 manual

Canon

PUB.DIM-734

Digital Video Camcorder  
**Instruction Manual** English

Caméscope numérique  
**Manuel d'instruction** Français

Videocámara digital  
**Manual de Instrucciones** Español

ZR700 / ZR600



Mini DV Digital Video Cassette

PictBridge

Please read also the following instruction manual (electronic version on PDF file). For further details refer to the installation guide.

Veuillez lire aussi le manuel d'instruction suivant (version électronique sur fichier PDF). Pour d'autres détails référez-vous au guide d'installation.

Lea también el siguiente manual de instrucciones (versión electrónica en archivo PDF). Para mayores detalles, referirse a la guía de instalación.

• Digital Video Software

NTSC

This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. To install your download click on the name of the downloaded file. The driver may be included in your OS or you may not need a driver. Recommended Drivers File Name Date File Size Optional Drivers File Name Date File Size Recommended Software File Name Date File Size Optional Software File Name Date File Size Recommended Manuals File Name Date File Size Optional Manuals File Name Date File Size This limited warranty is only effective upon presentation of your Bill of Sale or other proof of purchase. The Equipment is warranted under normal, noncommercial, personal use, against defective materials or workmanship as follows Parts Defective parts will be exchanged for new parts or comparable rebuilt parts for a period of ONE YEAR from the date of original purchase, except for a defective Video Head, which will be exchanged for a period of three months from the date of purchase. Labor For a period of ONE YEAR from the date of original purchase, labor will be provided free of charge by our factory service centers or designated service facilities located in the United States. When returning Equipment under this warranty, you must prepay the shipping charges, and you must enclose the Bill of Sale or other proof of purchase with a complete explanation of the problem. During the ONEYEAR warranty period, repairs will be made and the Equipment will be returnshipped to you free of charge. For repairs after the warranty period is over, you will be given an estimate of the cost of repair and an opportunity to approve or disapprove of the repair expense before it is incurred. If you approve, repairs will be made and the Equipment will be returnshipped to you. shipping charges apply. If you disapprove, we will returnship the equipment at no charge to you. [http://asfalon.com/\\_files/dxf2xyz-manual.xml](http://asfalon.com/_files/dxf2xyz-manual.xml)

- canon zr600 manual, canon zr 600 user manual, canon zr200 manual pdf, zr600 canon camera manual.

**Canon**

PUB.DIM-734

Digital Video Camcorder  
**Instruction Manual** **English**

Caméscope numérique  
**Manuel d'instruction** **Français**

Videocámara digital  
**Manual de Instrucciones** **Español**

**ZR700 / ZR600**



Mini DV Digital Video Cassette

PictBridge

Please read also the following instruction manual (electronic version on PDF file). For further details refer to the installation guide.

Veuillez lire aussi le manuel d'instruction suivant (version électronique sur fichier PDF). Pour d'autres détails référez-vous au guide d'installation.

Lea también el siguiente manual de instrucciones (versión electrónica en archivo PDF). Para mayores detalles, referirse a la guía de instalación.

• Digital Video Software



**NTSC**

Canon brand peripheral equipment and software which may be distributed with, or factory loaded on, the Equipment, are sold AS IS without warranty of any kind by Canon USA, including any implied warranty regarding merchantability or fitness for a particular purpose. The sole warranty with respect to such nonCanon brand items is given by the manufacturer or producer thereof. If the Equipment contains a hard disk drive, Canon USA recommends that data stored on that drive be duplicated or backed up to prevent its loss in the event of failure or other malfunction of such drive. Canon USA shall have no responsibility under this limited warranty for use of the Equipment in conjunction with incompatible peripheral equipment and incompatible software. In order to obtain warranty service, contact the authorized Canon retail dealer from whom you purchased the Equipment or call the CANON INFORMATION CENTER AT 1800OKCANON. You will be directed to the nearest service facility for your Equipment. This Limited Warranty covers all defects encountered in normal use of the Equipment and does not apply in the following cases This warranty does not cover units sold to rental firms, military operations, hotels, schools, hospitals or for other commercial, industrial, or institutional applications. These uses are covered only by such specific warranty as Canon may issue with such sales. This Limited Warranty does not apply to accessories or consumables for the Equipment, which are sold "AS IS", without warranty of any kind by Canon USA. Please retain this warranty card and your Bill of Sale as a permanent record of your purchase. This card is most important in order to be sure you are contacted right away should there be a safety inspection, modification or product recall under applicable laws or regulations. Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store It plugs directly into a power outlet without a cable. <http://perles-del-beya.com/userfiles/dxg-505v-manual.xml>

Canon

PUB.DIM-734

Digital Video Camcorder  
**Instruction Manual** English

Caméscope numérique  
**Manuel d'instruction** Français

Videocámara digital  
**Manual de Instrucciones** Español

**ZR700 / ZR600**



Mini DV Digital Video Cassette

PictBridge

Please read also the following instruction manual (electronic version on PDF file). For further details refer to the installation guide.

Veuillez lire aussi le manuel d'instruction suivant (version électronique sur fichier PDF). Pour d'autres détails référez-vous au guide d'installation.

Lea también el siguiente manual de instrucciones (versión electrónica en archivo PDF). Para mayores detalles, refiérase a la guía de instalación.

• Digital Video Software


**NTSC**

This allows for uninterrupted recording of your special events and keeps your batteries ready to go. The cable connects to your camera and to the USB port on your PC or MAC Computer. Comes standard with the EOS 1Ds Mark III, 1D Mark IV, 1D Mark III, 1Ds Mark II, 1D Mark II N, 1D Mark II, 5D Mark II, 7D, 5D, 50D, 40D, 30D, 20D, 10D, Digital Rebel XTi, Digital Rebel XT and Digital Rebel. Please see Compatibility tab for compatible models. This case can be conveniently carried by hand or via the comfortable shoulder strap, providing convenient handsfree protection. The SCA50 Soft Carrying Case, the professional looking option, is made with genuine leather. For further details refer to the Pour d'autres détails référez Para mayores detalles, Instruction Manual If such changes or modifications should be made, you could be required to stop operation of the equipment. Canon U.S.A. Inc. One Canon Plaza, Lake Success, NY 11042, U.S.A. Tel No. 5163285600 CAUTION TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. The Adapter can be used with a power supply between 100 and 240 V AC. For areas where 120 V AC power is not used, you will need a special plug adapter. Please read this manual carefully before you use the camcorder and retain it for future reference. Should your camcorder fail to operate correctly, refer to the Troubleshooting table Change the display language before you begin Symbols and References Used in This Manual Precautions related to the camcorder operation. Operating Modes Switch CAMERA PLAY CAMERA PLAY Function can be used in this mode. Function cannot be used in this mode. Write down the number and other information here and retain this book as a permanent record of your purchase to aid identification in case of theft. Unplug the power cord from the power outlet and disconnect it from the adapter. 5. Remove the battery pack after use. You can keep the battery pack attached; the battery power will not be consumed. 1.

Turn the switch to 2. Connect a power source to the camcorder when replacing the backup battery to retain the settings. 1. Open the backup battery cover. Fastening the Grip Belt Adjust the grip belt so that you can reach the zoom lever with your index finger, and the. When using a battery pack, the camcorder retains the setting even if you change the position of the The battery usage time shortens when the LCD screen is set brighter switch. If necessary, clean the video heads 113. Recording 1. Open the lens cover move the lens cover switch down to 2. When powered by a battery pack, the

camcorder shuts off to save power if left without any operation for 5 minutes. Approximately 30 seconds before the camcorder shuts off the message “. The camcorder rewinds the tape, plays back the last few seconds, and returns to record pause mode. Record Search In record pause mode, this function allows you to play back the tape forward or reverse to locate the point where you wish to begin recording. To resume normal operation turn the and then back to CAMERA. Screen Displays during Recording Time Code Indicates the recording time in hours, minutes and seconds. If necessary, support the camcorder with your left hand. Be careful that your fingers do not touch the microphone or lens. The picture may become distorted during some special playback modes. The camcorder stops the tape automatically after 5 minutes in playback pause to protect the tape and video heads. towards. The sound will be muted when the LCD panel is closed or when there is a video input from the AV terminal . Connect the white plug to the white audio terminal L left, the red plug to the red audio terminal R right and the yellow plug to the yellow video terminal VIDEO. If you connect the camcorder to a TV with Video ID1 system, recordings made in the widescreen mode will be automatically played back in widescreen mode. Submenu Menu Item FUNC.

SCHEMATIC DIAGRAM CAMERA-MAIN C.B.A.

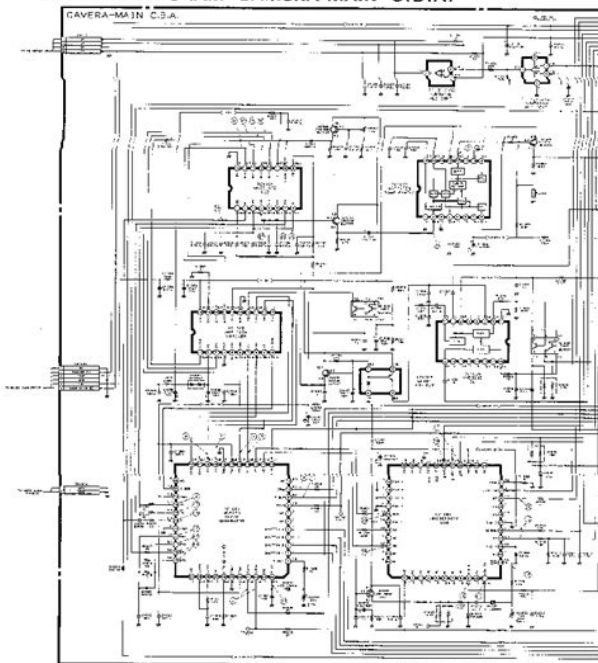

01 May. 1991

<http://www.raumboerse-luzern.ch/mieten/bosch-nwc-0495-10p-manual>

Recording Programs Program AE The camcorder adjusts focus, exposure and other settings automatically. However, you have the option of adjusting the settings manually. Spotlight Use this mode to record spotlit scenes. Fireworks Use this mode to record fireworks. Fireworks mode To avoid camcorder shake, we recommend using a tripod. Use a tripod when recording in the recording mode as the shutter speed slows down. In such case, focus manually. Subjects with low Reflective contrast or without surfaces Joystick 1. Set the program selector to 2. Adjust the zoom. When you operate the zoom after adjusting the focus, the subject may not stay in focus. The camcorder retains the custom white balance setting even if you turn it off. When you have set the custom white balance Depending on the light source, “. The image may flicker when recording with high shutter speeds. If “ ” camcorder shake warning appears in the camcorder, for example, by mounting it on a tripod or

placing it on a table. . This allows you to obtain a brighter A.SL SHUTTER ON the icon and press . Do not point the LED light at persons while they are driving. The camcorder will record the image after a 10second countdown 2 seconds when using the PHOTO button of the wireless controller. The countdown appears on the screen. Wind Screen The camcorder reduces the wind noise automatically. However, you can turn off the wind screen when recording indoors, or when you want the microphone to be as sensitive as possible. Fade Trigger FADET Corner Wipe CORNER Flip FLIP Zigzag ZIGZAG Tide TIDE Wipe WIPE Jump JUMP Puzzle PUZZLE Beam BEAM The camcorder retains the setting even if you turn it off or change the recording program. However, you need to select again the still image to be used with the Card Mix effect. You can select the data code combination and display it during playback. Joystick MENU 1. Open the FUNC. menu, select 2. Select . This function is operated with the wireless controller.

<https://jagatex.pl/images/c-programming-manual-pdf.pdf>



This function is operated with the wireless controller. The displays "FUNC." and "P.SET" at the bottom of the screen refer to the button names on the camcorder and will not change when you change the language. Changing the Date Format You can select between three date formats. If you turn off the beep, all camcorder sounds will be turned off. MENU. Changing the Display of the StartUp Image You can set whether the Canon logo will be displayed or not when you turn on the camcorder. MENU To turn off the startup image 1. It starts automatically when you leave the camcorder turned on using the power adapter without loading a recording media for more than 5 minutes. However, you can set the camcorder not to start the demonstration mode. If you connect a digital video device, you can copy recordings with virtually no generation loss in image and sound quality. See Playing Back on a TV Screen 2. Blank sections may be recorded as anomalous picture. If the picture does not appear, reconnect the DV cable or turn the camcorder off and back on again. You can only record video signals from devices with the recordings in SD standard definition standard, in SP or LP recording mode. The DV terminal serves as output terminal only. You cannot use the DV terminal for audio dubbing. If you add sound to a tape not recorded with this camcorder, sound quality may decrease. Sound quality may decrease when you add sound to the same scene for more than 3 times. However, the mix balance is memorized by the camcorder. AUDIO SETUP the to save the changes. Otherwise, the computer may not operate properly. Remove the memory card. 4. Close the cover. This camcorder is compatible with SD Memory Cards or MultiMediaCards only. Do not use any other types of memory cards. Proper operation cannot be guaranteed for all memory

cards. You can also record a still image on the memory card while you record a movie on the tape. Adjust the focus manually with the joystick.

<https://havenhospicenj.com/images/c-scope-cs3mx-manual.pdf>



When powered by a battery pack, the camcorder shuts off to save power if left without any operation for 5 minutes. Approximately 30 seconds before the camcorder shuts off the message “. The CARD access indicator flashes. When recording from a tape in the camcorder or other video devices A still image recorded from an image in widescreen mode will be vertically compressed. The data code of the still image will reflect the date and time it has been recorded on the memory card. Still Image Size and Quality Indicates the size and quality of the still image. When recording from a tape in the camcorder or other video devices A movie recorded from an image in widescreen mode will be vertically compressed. Doing so could result in data damage. Index Screen 1. If a memory card is initialized, all still images and movies, even protected ones, will be erased permanently. Movies can only be protected when the first scene is displayed as a still image. Be careful when erasing images. Erased images cannot be recovered. Protected images cannot be erased. Movies can only be erased when the first scene is displayed as a still image. Erasing a Single Image 1. Images erased by initializing cannot be recovered. Initialize all memory cards before using them with this camcorder. A confirmation dialog appears. With Canon’s PictBridge compatible printers, the printing will stop immediately even if not completed and the paper will be fed through. Printing Errors If an error occurs during the printing process, an error message appears 110. Selecting Still Images for Printing Print Order Do not connect a USB or DV cable to the camcorder while setting the print orders. MENU PRINT ORDER 1. Select the still image you wish to print. See Installing the Software in the Digital Video Software instruction manual PDF file. These transfer settings are compatible with the Digital Print Order Format DPOF standards. A maximum of 998 images can be selected.

Do not connect a USB or DV cable to the camcorder while setting the transfer orders. MENU TRANS.ORDER OFF 1. For playback, you can show the camcorder displays on the TV screen. Replace the cassette or change the ERASURE PREVENTION position of the protect switch. REMOVE THE Camcorder stopped operating to protect the tape. Unload and CASSETTE reload the cassette. CHECK THE INPUT DV cable is not connected, or the connected digital device is turned off. On printers equipped with an operation panel, an error number or message displays on the panel. Refer to the printer’s manual for the remedies corresponding to the error numbers or messages. After a while, turn the printer back on and reconnect the USB cable. Check the printer status. HARDWARE ERROR Refer to the printers manual to solve the problem. COMMUNICATION The printer is experiencing a data transmission error. To maintain the best picture quality, we recommend cleaning the video heads frequently with the Canon DVMCL Digital Video Head Cleaning Cassette or

a commercially available dry cleaning cassette. Contact with metallic objects may cause a short circuit and damage the battery pack. Dirty terminals may cause a poor contact between the battery pack and the camcorder. Wipe the terminals with a soft cloth. If the tape becomes slack and damaged, it may cause picture and sound distortion. Return cassettes in the case and store them upright. Do not leave the cassette in the camcorder after use. Do not use spliced tapes or nonstandard cassettes as they may damage the camcorder. Image data may be corrupted or lost due to memory card defects or exposure to static electricity. Canon Inc. makes no warranties for corrupted or lost data. Consult the Canon Service Center for information on plug adapters for overseas use. Playback on a TV Screen You can only play back your recordings on TVs with NTSC system. Consult your dealer or a Canon Service Center if the problem persists. Power Source Problem Camcorder will not turn on.

<http://bubblesoflove.net/wp-content/plugins/formcraft/file-upload/server/content/files/16272962c40ceb--breville-cafe-roma-espresso-maker-manual.pdf>

The camcorder switches off by itself. Cassette compartment will not open. Tape reached the end " screen. Cassette is protected " flashes on the screen. Camcorder is set to a mode other than the mode. Camcorder will not focus. Autofocus does not work on that subject. Viewfinder is not adjusted. Image cannot be erased. " " flashes red. Cause Camcorder is turned off, or is Set the camcorder to not set to mode. You can also obtain genuine accessories for your Canon camcorder by calling 18008284040, Canon U.S.A. Information Center. Use of genuine Canon accessories is recommended. This product is designed to achieve excellent performance when used with genuine Canon accessories. This mark identifies genuine Canon video accessories. When you use Canon video equipment, we recommend Canonbrand accessories or products bearing the same mark. Exif Print is a standard for enhancing the communication between camcorders and printers. The limited warranty is only effective upon presentation of your Bill of Sale or other proof of purchase. Labour For a period of one year from the date of original purchase, labour will be provided free of charge by our Canon Service Facilities in Canada. NATIONAL HEADQUARTERS 6390 Dixie Road, Mississauga, Ontario L5T 1P7 CANON CANADA INC. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Canon Zr600 User Manual. To get started finding Canon Zr600 User Manual, you are right to find our website which has a comprehensive collection of manuals listed. Our library is the biggest of these that have literally hundreds of thousands of different products represented. I get my most wanted eBook Many thanks If there is a survey it only takes 5 minutes, try any survey which works for you. For further details refer to the installation guide. Veuillez lire aussi le manuel d'instruction suivant version électronique sur fichier PDF. Pour d'autres détails référez vous au guide d'installation.

[www.ckt-works.com/userfiles/files/bl30g%20manual.pdf](http://www.ckt-works.com/userfiles/files/bl30g%20manual.pdf)

Lea también el siguiente manual de instrucciones versión electrónica en archivo PDF. Ce manuel d'instruction explique comment installer le logiciel, connecter le caméscope à l'ordinateur et transférer des photos à partir d'un disque ou d'une carte mémoire sur un ordinateur. En este manual de instrucciones se explica cómo instalar el software, conectar la videocámara a un ordenador, y descargar imágenes fijas de un disco o una tarjeta de memoria a un ordenador. Operation is subject to the following two conditions 1 This device may not cause harmful interference, and 2 this device must accept any interference received, including interference that may cause undesired operation. Note This equipment has been tested and found to comply with the limits for class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Use of

shielded cable is required to comply with class B limits in Subpart B of Part 15 of FCC Rules. Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment. Canon U.S.A. Inc. One Canon Plaza, Lake Success, NY 11042, U.S.A. Tel No. 5163 285600 CAUTION TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT. The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance servicing instructions in the literature accompanying the product.

The product should be cleaned only as recommended in this manual.

6. Accessories — Do not use accessories not recommended in this manual as they may be hazardous.

7. Avoid magnetic or electric fields — Do not use the camera close to TV transmitters, portable communication devices or other sources of electric or magnetic radiation. The product may fall, causing serious injury to a child or adult, and serious damage to the product. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

10. Power Sources — The CA570 Compact Power Adapter should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. Regarding other power sources such as battery power, refer to instructions in this manual.

11. Polarization — The CA570 Compact Power Adapter is equipped with a polarized 2-prong plug a plug having one blade wider than the other. The 2-prong polarized plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

12. Power Cord Protection — Power cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to plugs and the point from which the cords exit the product.

13. Outdoor Antenna Grounding — If an outside antenna is connected to the product, be sure the antenna is grounded so as to provide some protection against voltage surges and built-up static charges. See figure 1. **IMPORTANT SAFETY INSTRUCTIONS** This will prevent damage to the product due to lightning and powerline surges.

15.

Overloading — Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

16. Objects and Liquid Entry — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Be careful not to spill liquid of any kind onto the product.

17. Servicing — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

18. Damage Requiring Service — Disconnect this product from the wall outlet and all power sources including battery, and refer servicing to qualified service personnel under the following conditions:

- When the power supply cord or plug is damaged.
- If any liquid has been spilled onto, or objects have fallen into, the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally even if you follow the operating instructions. Adjust only those controls that are covered by the operation instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance. This indicates a need for service.

19. Replacement Parts — When replacement parts are required, be sure the service technician has used replacement parts that are specified by Canon or that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

20. Safety Check — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in safe operating order. Fig.

1 EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE ANTENNA LEAD IN WIRE GROUNDING CONDUCTORS NEC SECTION 810 21 ANTENNA DISCHARGE UNIT NEC SECTION 81020 GROUND CLAMPS POWER SERVICE GROUNDING ELECTRODE SYSTEM NEC ART 250 PART H GROUND LAMP ELECTRIC SERVICE EQUIPMENT NEC NATIONAL ELECTRICAL CODE When replacement of power supply is required, please return it to the responsible nearest Canon Service Center and please replace it with the same type number CA 570. The Adapter can be used with a power supply between 100 and 240 V AC. For areas where 120 V AC power is not used, you will need a special plug adapter. Contact your nearest Canon Service Center for further information. This Class B digital apparatus complies with Canadian ICES003. Should your camcorder fail to operate correctly, refer to the Troubleshooting table 118. Change the display language before you begin 66. About the Joystick and the Joystick Guide The mini joystick allows you to control many of the camcorder's operations and to select and change setting options in menus. The functions assigned to the joystick change according to the operation mode. You can display the joystick guide to remind you of the joystick's functions in each operating mode. Push the joystick up, down, left or right, to select an item or change settings. Press the joystick itself to save the settings or confirm an action. Recording movies Playing back movies Recording still images Playing back still images Setting the Time Zone, Date and Time Set the time zone, date and time when you first start using your camcorder, or when you have replaced the backup battery. Write down the number and other information here and retain this book as a permanent record of your purchase to aid identification in case of theft. The CHARGE indicator starts flashing. The indicator will stay on when the charging is complete d. 4.

When the charging is completed, disconnect the power adapter from the camcorder. Unplug the power cord from the power outlet and disconnect it from the adapter. 5. Remove the battery pack after use. Press the BATT. button to remove the battery. DC IN terminal CHARGE indicator You can keep the battery pack attached; the battery power will not be consumed. 1. Turn the switch to. 2. Connect the power cord to the power adapter. 3. Plug the power cord into a power outlet. 4. Connect the power adapter to the camcorder's DC IN terminal. Turn off the camcorder before connecting or disconnecting the power adapter. If the adapter is used close to a TV, it may cause picture interference. Move the adapter away from the TV or the antenna cable. Do not connect any products that are not expressly recommended to the camcorder's DC IN terminal or to the power adapter. You may hear some noise from the power adapter during use. This is not a malfunction. Do not disconnect and reconnect the power cord while charging a battery pack. Charging may stop. The battery pack may not be charged correctly even if the CHARGE indicator is continuously on. The battery pack may also not be charged correctly when a power outage occurs during charging. If the battery temperature goes outside this temperature range while charging, the CHARGE indicator will start flashing rapidly and the charging will stop. A lithium ion battery pack can be charged at any charge state. Unlike conventional battery packs, you do not need to completely use or discharge it before charging. We recommend that you prepare battery packs 2 to 3 times longer than you think you might need. To conserve battery power, turn off the camcorder instead of leaving it in record pause mode. This is useful for outdoor recordings. Press the LCD BACKLIGHT button.

This setting does not affect the brightness of the recording or the viewfinder screen. When using a battery pack, the camcorder retains the setting even if you change the position of the switch. The battery usage time shortens when the LCD screen is set brighter 16. LCD BACKLIGHT button The time zone setting appears see table on the next page. The default setting is New York or Singapore depending on the region. 4. Select your time zone and press . To adjust for daylight saving time, select the time zone with the " " next to the area. Once you have set time zone, date and time, you do not need to reset the clock each time you travel to another time zone. Just set the time zone to the one of your destination, and the camcorder automatically adjusts the

clock. When You Have Finished Recording 1. Turn the switch to . 2. Close the LCD panel. 3. Close the lens cover move the lens cover switch to . 4. Unload the cassette. 5. Disconnect the power source. Before You Begin Recording Make a test recording first to check if the camcorder operates correctly. If necessary, clean the video heads 1-13. Less than 0.01% of the pixels may occasionally misfire or appear as black or green dots. This has no effect on the recorded image and does not constitute a malfunction. When powered by a battery pack, the camcorder shuts off to save power if left without any operation for 5 minutes. Approximately 30 seconds before the camcorder shuts off the message " AUTO POWER OFF" will appear. To continue recording, turn the switch to and then back to CAMERA. Wait until the tape counter stops completely before you start recording. When you do not remove the cassette, you can record the next scene without producing any noise or blank sections between the recordings even if you turn the camcorder off. Bright light may make it difficult to use the LCD screen. In such case, use the viewfinder instead.

<https://www.thebiketube.com/acros-bosch-nibbler-manual>